

Ultra Efficient Energy Manager with MPPT Voltage Regulation, Regulated Buck Output and 5 V CC/CV Charger

Features and Benefits

Single source input

- Efficiency above 90 % on the source.
- Harvest from 120 mV after cold start.
- Up to 135 mA current extracted from the harvester.

Maximum Power Point Tracking

- Open circuit voltage ratio regulation method.
- Matches various single/dual elements PV cells.
- Configurable MPPT ratios ranging from 35% to 90%.
- Configurable MPPT sensing timing and period.
- MPPT voltage operation range from 120 mV up to the storage element voltage.

Cold start from 275 mV / 1.5 μ W input

- Startup at ultra-low power from harvesting source input.

Selectable overdischarge and overcharge protection

- Supports various types of rechargeable batteries (LiC, Li-ion, LiPo...).

Regulated output for application circuit

- Buck regulator with efficiency above 90 %.
- Selectable output voltage (2.2 V, 2.5 V or 2.8 V).
- Output current up to 100 mA.

System configuration by GPIO

- All settings are dynamically configurable through GPIO.

Shipping mode

- Disables charging and discharging the battery during shipment.

External 5 V charging capability

- Extra charging input for 5 V power supplies.
- CC/CV charging with configurable current limit in CC mode (max. 135 mA).
- Provides a fast charging alternative when no source is available for a long time.

Applications

Smart home	Industrial sensor
Smart building	Retail
Edge IoT	PC accessories

Description

The AEM10920 is a fully integrated and compact power management circuit that extracts DC power from a harvesting source to store energy in a rechargeable battery and supply an application circuit. A 5 V input can also be used to charge the battery (e.g. if the battery gets depleted). This compact and ultra-efficient battery charger allows for extending battery lifetime and eliminating the primary energy storage element in a large range of applications.

Thanks to a Maximum Power Point Tracking and a ultra-low power boost converter, the AEM10920 harvests the maximum available power from a source to charge a storage element.

With its unique cold-start circuit, it can start operating with an input voltage as low as 275 mV (min. 1.5 μ W power).

The configurable protection levels determine the storage element voltage protection thresholds to avoid overcharging and overdischarging the storage element and thus damaging it.

A shipping mode is available to avoid charging and discharging the storage element during shipping or storage.

A buck regulator with selectable output voltage allows an application circuit to be supplied with high efficiency.

Device Information

Part Number	Package	Body size
10AEM10920A0000	QFN 24-pin	4x4mm

Evaluation Board

Part number
2AAEM10920A001

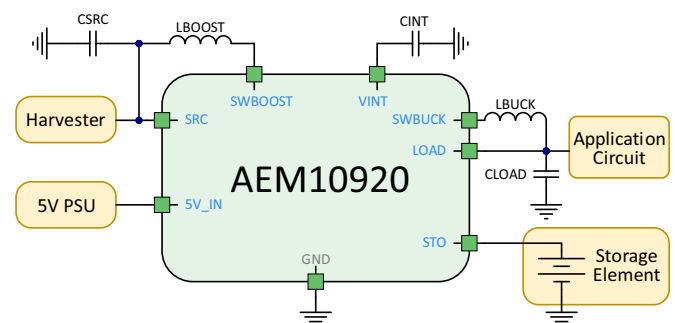


Table of Contents

1. Pin Configuration and Functions	6
2. Specifications	8
2.1. Absolute Maximum Ratings	8
2.2. ESD Ratings	8
2.3. Thermal Resistance	8
2.4. Electrical Characteristics at 25 °C	9
2.5. Recommended Operation Conditions	11
2.6. Typical Characteristics	12
2.6.1. Boost Converter Conversion Efficiency	12
2.6.2. Buck Converter Conversion Efficiency	13
3. Functional Block Diagram	14
4. Theory of Operation	15
4.1. Cold-Start Circuits	15
4.2. Boost Converter	15
4.2.1. Operation Principle	15
4.2.2. Maximum Power Point Tracking	15
4.3. 5V Charger	16
4.4. Buck Converter	16
4.5. State Machine Description	17
4.5.1. Reset State	17
4.5.2. Sense STO State	17
4.5.3. Start State	18
4.5.4. Supply State	18
4.5.5. OVDIS State	18
4.5.6. Sleep State	18
5. System Configuration	19
5.1. Configuration Pins Reading	19
5.2. MPPT Configuration	19
5.3. Storage Element Thresholds	20
5.3.1. Configuration Pins	20
5.4. Boost Converter Timings	21
5.5. LOAD Output Voltage	21
5.6. 5 V Charger	21
6. Typical Application Circuit	22
6.1. Example Circuit 1	22
6.2. Example Circuit 2	24
7. Minimum BOM	25
8. Layout	26
8.1. Guidelines	26
8.2. Example	26
9. Package Information	27
9.1. Moisture Sensitivity Level	27
9.2. RoHS Compliance	27
9.3. REACH Compliance	27



9.4. Package Dimensions	28
9.5. Board Layout	29
10. Glossary	30
10.1. VINT Acronyms	30
10.2. SRC Acronyms	30
10.3. STO Acronyms	30
10.4. LOAD Acronyms	30
10.5. 5V_IN Acronyms	31
10.6. Various Acronyms	31
11. Revision History	32

List of Figures

Figure 1: Pinout diagram	6
Figure 2: Boost converter efficiency	12
Figure 3: Buck (LOAD) converter efficiency	13
Figure 4: Functional block diagram	14
Figure 5: Simplified schematic view of the boost converter	15
Figure 6: Simplified schematic view of the buck converter	16
Figure 7: AEM10920 state machine	17
Figure 8: Typical application circuit 1	22
Figure 9: Typical application circuit 2	24
Figure 10: Schematic with minimum BOM	25
Figure 11: Layout example for the AEM10920 with associated passive components	26
Figure 12: QFN 24-pin 4x4mm drawing (all dimensions in mm)	28
Figure 13: Recommended board layout for QFN24 package (all dimensions in mm)	29

List of Tables

Table 1: Pins description (part 1)	6
Table 2: Pins description (part 2)	7
Table 3: Absolute maximum ratings	8
Table 4: ESD ratings	8
Table 5: Thermal data	8
Table 6: Electrical characteristics (part 1)	9
Table 7: Electrical characteristics (part 2)	10
Table 8: Recommended external components	11
Table 9: Logic input pin connections	11
Table 10: Configuration of MPP ratio and timings	19
Table 11: Storage element configuration with STO_CFG[1:0] pins	20
Table 12: Boost converter timings configuration	21
Table 13: Configuration of LOAD voltage with LOAD_CFG[1:0] pins	21
Table 14: Typical resistor values for setting 5 V charger max. current	21
Table 15: Minimum BOM	25
Table 16: Moisture sensitivity level	27
Table 17: Revision history	32

1. Pin Configuration and Functions

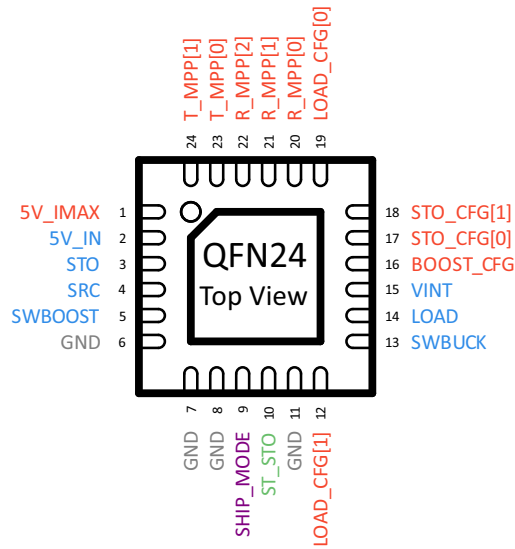


Figure 1: Pinout diagram

NAME	PIN NUMBER	FUNCTION
Power Pins		
SRC	4	Connection to the energy source harvested by the boost converter.
SWBOOST	5	Switching node of the boost converter.
STO	3	Connection to the energy storage element (rechargeable battery).
SWBUCK	13	Switching node of the buck converter.
LOAD	14	Output voltage of the buck converter to supply an application circuit.
5V_IN	2	Input of the 5 V DC power supply (optional). Leave floating if not used.
VINT	15	Connection for C_{INT} buffering capacitor. AEM10920 internal power supply (do not connect any external circuit on VINT).

Table 1: Pins description (part 1)

NAME	PIN NUMBER	LOGIC LEVEL		FUNCTION
		LOW	HIGH	
Control Pin				
SHIP_MODE	9	GND	STO	Logic input. When HIGH: <ul style="list-style-type: none"> - Minimum consumption from the storage element. - Storage element charge is disabled (boost converter is disabled). - Buck (LOAD) is disabled. - VINT is charged only if energy is available on SRC. Read as LOW if left floating.
Configuration Pins				
R_MPP[2]	22	GND	VINT	Used for the configuration of the MPP ratio. Read as HIGH when left floating.
R_MPP[1]	21	GND	VINT	
R_MPP[0]	20	GND	VINT	
T_MPP[1]	24	GND	VINT	Used for the configuration of the MPP timings. Read as HIGH when left floating.
T_MPP[0]	23	GND	VINT	
STO_CFG[1]	18	GND	VINT	Used to configure the storage element voltage thresholds. Read as HIGH if left floating.
STO_CFG[0]	17	GND	VINT	
LOAD_CFG[1]	12	GND	VINT	Used to configure the LOAD output regulation voltage. Read as HIGH if left floating.
LOAD_CFG[0]	19	GND	VINT	
BOOST_CFG	16	GND	VINT	Used to configure the boost converter timings, as described in Section 5.4. Read as HIGH if left floating.
5V_IMAX	1	Analog Pin		Connection to an external resistor to set the charging current from the 5V_IN supply to STO. Leave floating if the 5V_IN power supply is not used.
Status Pin				
ST_STO	10	GND	STO	Logic output. <ul style="list-style-type: none"> - HIGH when in SUPPLY STATE and SLEEP STATE. - LOW otherwise.
Other pins				
GND	Thermal Pad, 6, 7, 8, 11			The thermal pad must be strongly tied to the PCB ground plane, as it is the main GND connection of the AEM10920.

Table 2: Pins description (part 2)

2. Specifications

2.1. Absolute Maximum Ratings

Parameter	Min	Max	Unit	
Operating junction temperature T_j	-40	85	°C	
Storage temperature T_{stg}	-65	150	°C	
Input voltage	5V_IN, STO, SRC, SWBOOST, SWBUCK, LOAD, 5V_IMAX, LOAD_CFG[1], SHIP_MODE, ST_STO	-0.3	5.50	V
	VINT, LOAD_CFG[0], BOOST_CFG, STO_CFG[1:0], R_MPP[2:0], T_MPP[1:0]	-0.3	2.75	V


Table 3: Absolute maximum ratings

2.2. ESD Ratings

Parameter	Value	Unit	
Electrostatic discharge V_{ESD}	Human-Body Model (HBM) ¹	± 2000	V
	Charged-Device Model (CDM) ²	± 500	V

Table 4: ESD ratings

1. ESD Human-Body Model (HBM) value tested according to JEDEC standard JS-001-2023.
2. ESD Charger-Device Model (CDM) value tested according to JEDEC standard JS-002-2022.

ESD CAUTION	
	ESD (ELECTROSTATIC DISCHARGE) SENSITIVE DEVICE These devices have limited built-in ESD protection and damage may thus occur on devices subjected to high-energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality

2.3. Thermal Resistance

Package	θ_{JA}	θ_{JC}	Unit
QFN-24	60	6	°C/W

Table 5: Thermal data

2.4. Electrical Characteristics at 25 °C

Symbol	Parameter	Conditions	Min	Typ	Max	Unit
Power conversion						
$P_{SRC,CS}$	Minimum source power required for cold start.			1.5		μW
$V_{SRC,CS}$	Minimum source voltage required for cold start.			0.275		V
V_{MPP}	Dynamically determined target regulation voltage of the source. V_{MPP} depends on $R_{MPP}[2:0]$ configuration and on the open-circuit voltage of the source V_{OC} .		0.12		$0.90 \times V_{STO}$	V
$V_{SRC,LOW}$	V_{SRC} threshold below which the AEM10920 switches to SLEEP STATE .			0.113		V
V_{OC}	Open-circuit voltage of the source.		0.00^1		V_{STO}	V
V_{5V_IN}	Voltage on the 5V_IN pin to allow for charging the battery.		3.50^2		5.50	V
$P_{5V_IN,MIN}$	Minimum power on 5V_IN to start charging the battery.	$V_{5V_IN} = 3.50\text{ V}$		51		μW
		$V_{5V_IN} = 5.50\text{ V}$		80		
$I_{5V,CC}$	Maximum charging current of 5 V charger when in constant current (CC) mode. This is programmed by the resistor on the 5V_IMAX pin.		13.50		135	mA
$T_{5V,RISE}$	Minimum rise time from 0 V to 5 V on the 5V_IN pin.			50		μs
Timing						
T_{CRIT}	In SUPPLY STATE , the AEM10920 waits for T_{CRIT} before switching to OVDIS STATE when V_{STO} drops below V_{OVDIS} .			2.50		s
$T_{GPIO,MON}$	GPIO reading rate.			1.85		s

Table 6: Electrical characteristics (part 1)

1. When the open-circuit voltage is below the source regulation voltage, the AEM10920 does not extract power from the source. Voltages down to **GND** do not damage the AEM10920.
2. For the 5 V charger to operate, the voltage on **5V_IN** must be greater than or equal to 3.5 V and at least 200 mV higher than the voltage on **STO**.

Symbol	Parameter	Conditions	Min	Typ	Max	Unit
Storage element						
V _{STO}	Voltage on the storage element.		2.50 ¹		4.35 ²	V
V _{OVDIS}	Minimum voltage accepted on the storage element before stopping to supply LOAD .	Configured by STO_CFG[1:0] .	2.50		3.50	V
V _{CHRDY}	Voltage required on the storage element to start supplying LOAD in START STATE .	Configured by STO_CFG[1:0] .	2.55		3.55	V
V _{OVCH}	Maximum voltage accepted on the storage element before disabling its charging.	Configured by STO_CFG[1:0] .	3.80		4.35	V
Internal supply & quiescent current						
V _{INT}	Internal voltage supply.		2.20	2.25	2.30	V
V _{INT,RESET}	Minimum voltage on VINT before switching to RESET STATE (from any other state).			2.0		V
V _{INT,CS}	Minimum voltage on VINT to allow the AEM10920 to switch from RESET STATE to SENSE STO STATE .			2.3		V
I _{QSUPPLY}	Quiescent current on VINT in SUPPLY STATE . ³	LOAD disabled.		270		nA
		LOAD enabled. ⁴		480		
I _{QSLEEP}	Quiescent current on VINT in SLEEP STATE . ³	LOAD disabled.		205		nA
		LOAD enabled. ⁴		415		
I _{QSHIP}	Quiescent current drawn on the storage element when the AEM10920 is in shipping mode (SHIP_MODE is HIGH) and that no energy is available on SRC (the AEM10920 is off in that case).	No energy on SRC .		10		nA
I _{QSHIP,SRC}	Quiescent current on STO when the shipping mode functionality is enabled (SHIP_MODE set HIGH).	Energy on SRC .		10		nA

Table 7: Electrical characteristics (part 2)

1. As set by the battery overdischarge threshold configuration.
2. As set by the battery overcharge threshold configuration.
3. When neither the boost converter nor the buck converter are running.
4. V_{LOAD} set to 2.2 V and **LOAD** pin left floating.

2.5. Recommended Operation Conditions

Symbol	Parameter	Condition	Min ¹	Typ	Max ¹	Unit
External components						
L _{BOOST}	Inductor of the boost converter.	BOOST_CFG = L	3.3	10 ²		μH
		BOOST_CFG = H	9.9	33 ²		μH
C _{SRC}	Capacitor decoupling the SRC terminal.			10		μF
L _{BUCK}	Inductor of the buck converter.		3.3	10 ²		μH
C _{LOAD}	Capacitor of the buck converter.		10	22		μF
C _{INT}	Capacitor decoupling the VINT terminal.		5	10		μF
C _{STO}	Capacitor decoupling the STO terminal.		5	10		μF
R _{5V_IMAX}	Resistor for configuring the 5V charger current when in constant current mode (CC). (Optional)		0.37		3.7	kΩ

Table 8: Recommended external components

1. All minimum and maximum values are real components values, taking into account tolerances, derating, temperatures, voltages and any operating conditions (special care must be taken with capacitor derating).

2. L_{BOOST} and L_{BUCK} typical values recommended for best tradeoff between boost efficiency and maximum current.

Symbol	Parameter		
Logic input pins			
R _{MPP} [2:0] T _{MPP} [1:0]	Boost source MPPT settings.	Logic LOW (L)	Connect to GND.
		Logic HIGH (H)	Connect to VINT.
STO_CFG[1:0]	Storage element voltage thresholds configuration.	Logic LOW (L)	Connect to GND.
		Logic HIGH (H)	Connect to VINT.
LOAD_CFG[1:0]	Configuration of the LOAD buck output voltage regulation.	Logic LOW (L)	Connect to GND.
		Logic HIGH (H)	Connect to VINT.
BOOST_CFG	Used to configure the boost converter timings, as described in Section 5.4.	Logic LOW (L)	Connect to GND.
		Logic HIGH (H)	Connect to VINT.
SHIP_MODE	Shipping mode enable.	Logic LOW (L)	Connect to GND.
		Logic HIGH (H)	Connect to STO.

Table 9: Logic input pin connections

2.6. Typical Characteristics

2.6.1. Boost Converter Conversion Efficiency

Figure 2 shows the AEM10920 boost efficiency with:

- $L_{BOOST} = 33 \mu\text{H}$ (Coilcraft LPS4018-333MRB).
- `BOOST_CFG = H (x3)`.

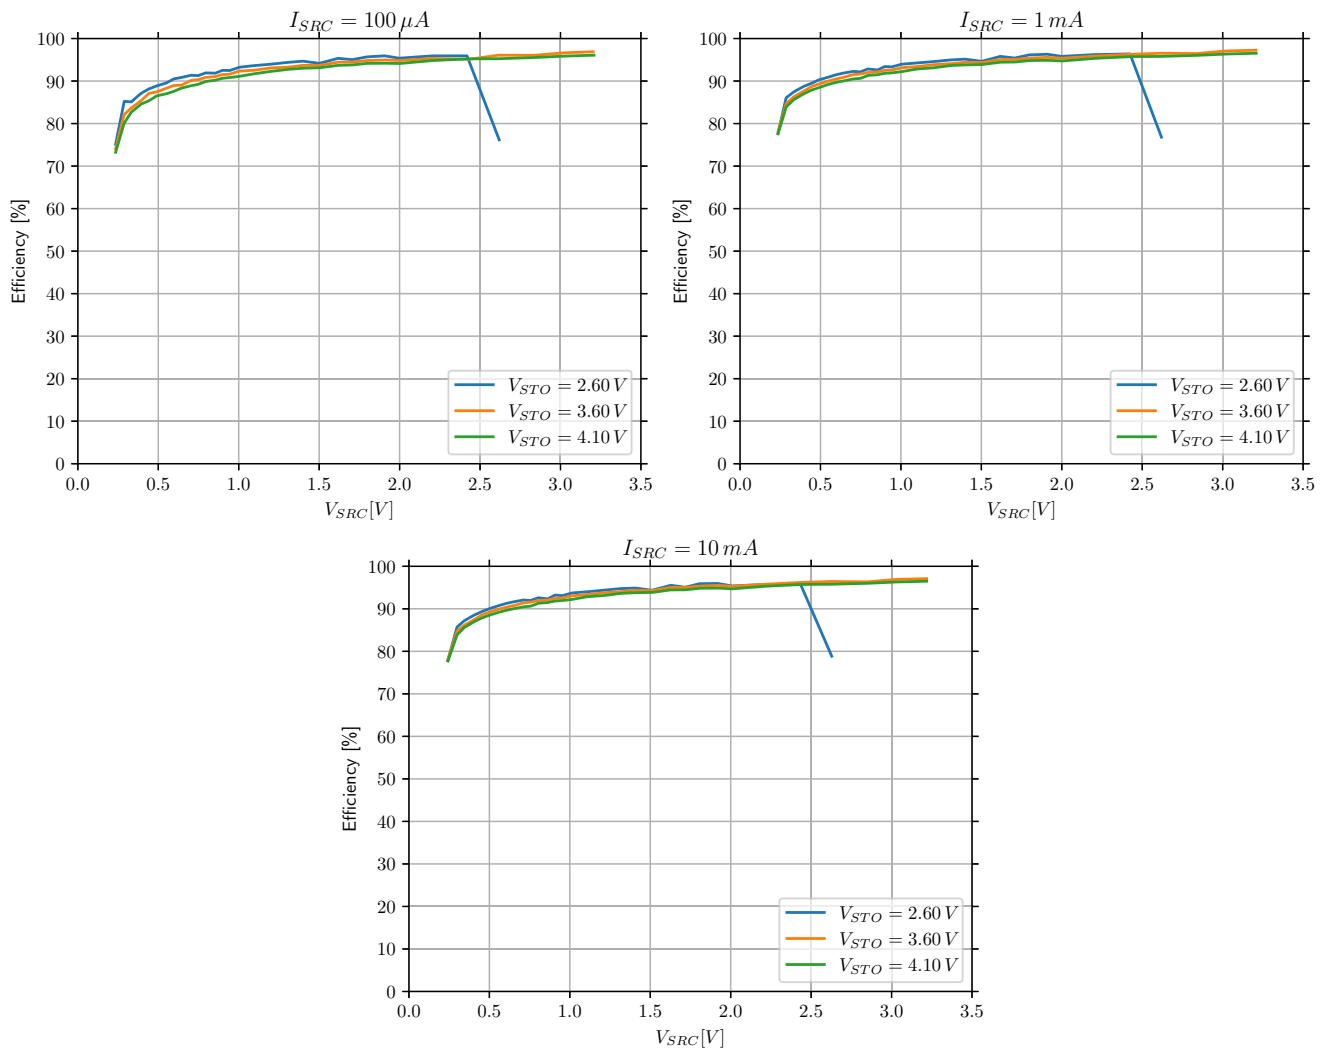


Figure 2: Boost converter efficiency

NOTE: The boost efficiency data presented in Figure 2 include the AEM10920 quiescent current.

2.6.2. Buck Converter Conversion Efficiency

Figure 3 shows the AEM10920 buck efficiency with $L_{BUCK} = 10 \mu\text{H}$ (TDK VLS252012CX-100M-1).

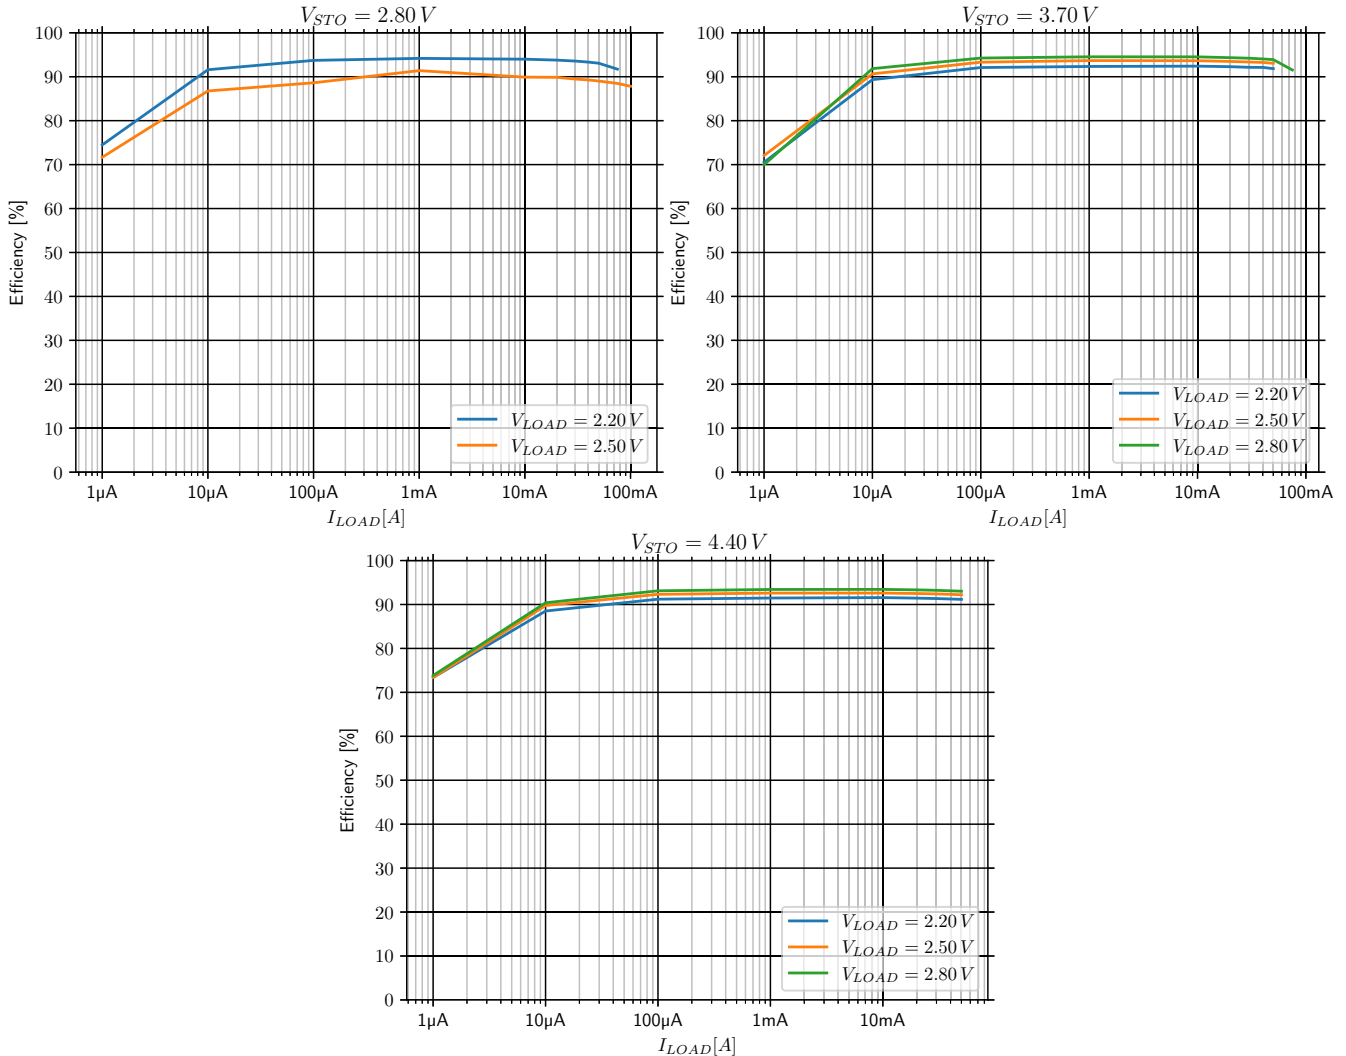


Figure 3: Buck (LOAD) converter efficiency

NOTE: The quiescent current of the AEM10920 is not included in the buck efficiency data presented in Figure 3, as it has already been included in the boost efficiency data shown in Section 2.6.1. This quiescent current has been measured with the boost converter in **SLEEP STATE** and the buck converter switched off.

3. Functional Block Diagram

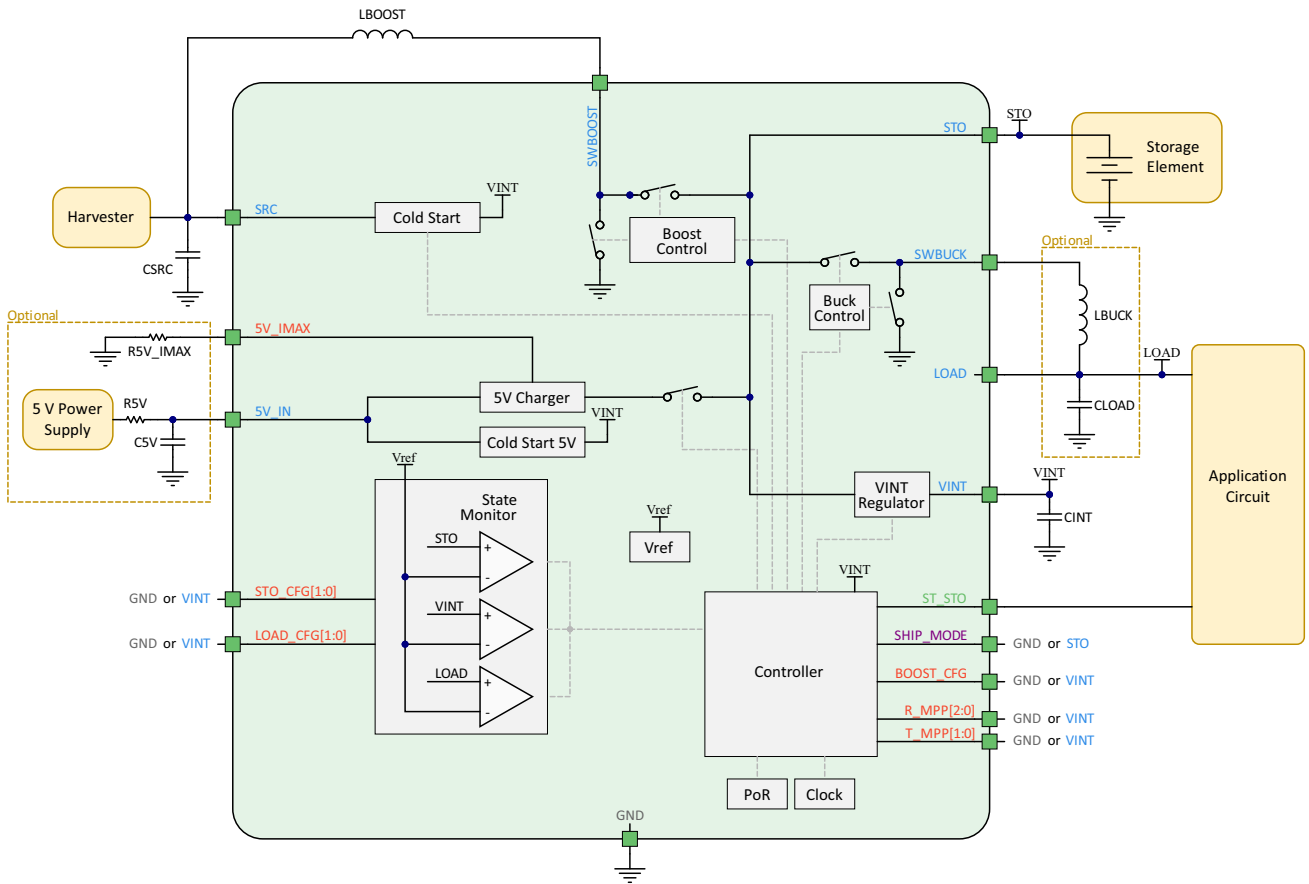


Figure 4: Functional block diagram

4. Theory of Operation

4.1. Cold-Start Circuits

The AEM10920 is able to coldstart from **SRC** or from **5V_IN**. The cold-start circuits supply the AEM10920 internal circuit (connected to **VINT**) when the device is in **RESET STATE**, **SENSE STO STATE** or **OVDIS STATE**.

4.2. Boost Converter

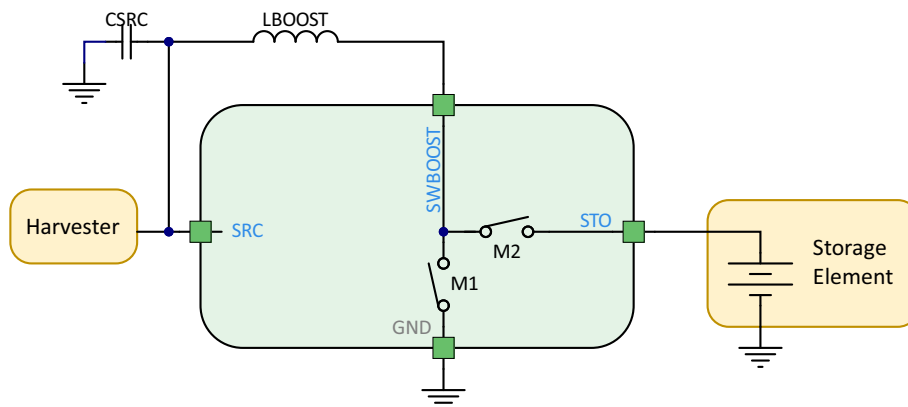


Figure 5: Simplified schematic view of the boost converter

4.2.1. Operation Principle

The boost (step-up) converter raises the voltage available at **SRC** to a level suitable for charging the storage element, in the range of 2.50 V to 4.35 V, according to the system configuration. The switching transistors of the boost converter are M1 and M2. The reactive power component of this converter is the external inductor L_{BOOST} .

Target source regulation voltage is determined by the source voltage regulation (dynamically determined by the MPPT module).

SRC is decoupled by the capacitor C_{SRC} , which smooths the voltage against the current pulses induced by the boost converter.

The storage element is connected to the **STO** pin, which voltage is V_{STO} . This node is linked to the output of the boost converter through transistor M2. When energy harvesting is occurring, the converter charges the battery.

The maximum current supplied to the **STO** pin depends on the value of L_{BOOST} and on the **BOOST_CFG** settings (see Section 5.4).

4.2.2. Maximum Power Point Tracking

The AEM10920 has a Maximum Power Point Tracking (MPPT) module, that relies on the fact that, for several models of harvesters (typ. solar cells), the ratio between the maximum power point voltage (V_{MPP}) and the open circuit voltage (V_{OC}) is constant for a wide range of harvesting conditions. For a solar cell, that means that V_{MPP}/V_{OC} is constant for any lighting conditions, even though both voltages increase when luminosity increase.

The MPP ratio (V_{MPP}/V_{OC}) differs from one harvester model to the other. User must set the MPP ratio to match the specifications of the harvester model used and thus maximize power extraction. This ratio is set with the configuration pins **R_MPP[2:0]** according to Table 10.

The MPPT module evaluates the open circuit voltage V_{OC} periodically to ensure optimal power extraction at any time. The sampling period $T_{MPPT,PERIOD}$ and sampling duration $T_{MPPT,SAMPLING}$ of the evaluation of V_{OC} are set according to Table 10 with the configuration pins **T_MPP[1:0]**. Every $T_{MPPT,PERIOD}$, the AEM10920 stops extracting power from the source, waits during $T_{MPPT,SAMPLING}$ for the source to rise to its open circuit voltage V_{OC} , and measures V_{OC} .

The AEM10920 supports multiple V_{MPP} levels in the range from 0.12 V to V_{STO} . It offers a choice of eight values for the V_{MPP}/V_{OC} fraction.

The MPPT module is active during **START STATE**, **OVDIS STATE**, **SUPPLY STATE** and **SLEEP STATE**.

4.3. 5V Charger

The AEM10920 is equipped with a 5 V charger for fast charging of the battery connected on the **STO** pin.

The 5 V charger can be used when the following conditions are met:

- $V_{5V_IN} \geq 3.5 \text{ V}$
- $V_{5V_IN} \geq V_{STO} + 200 \text{ mV}$

With the 5 V charger, the battery is charged by implementing a constant current / constant voltage operation (CC/CV):

- Constant current (CC) operation:
 - When V_{STO} is not close to V_{OVCH} .
 - Battery charging current $I_{5V,CC}$ is configured by the value of the R_{5V_IMAX} resistor connected to the **5V_IMAX** pin (see Section 5.6 for further details about R_{5V_IMAX} configuration). $I_{5V,CC}$ range is from 13.5 mA to 135 mA.

- Constant voltage (CV) operation:
 - When V_{STO} is close to V_{OVCH} .
 - The charging current $I_{5V,CV}$ gradually decreases to zero as V_{STO} reaches V_{OVCH} .

Using the 5 V charger is not mandatory. When not used, leave both **5V_IN** and **5V_IMAX** pins floating.

Please note that the rise time of the voltage applied on the **5V_IN** must not be too short. See Section 5.6 for more information and Section 6.1 for a design example.

4.4. Buck Converter

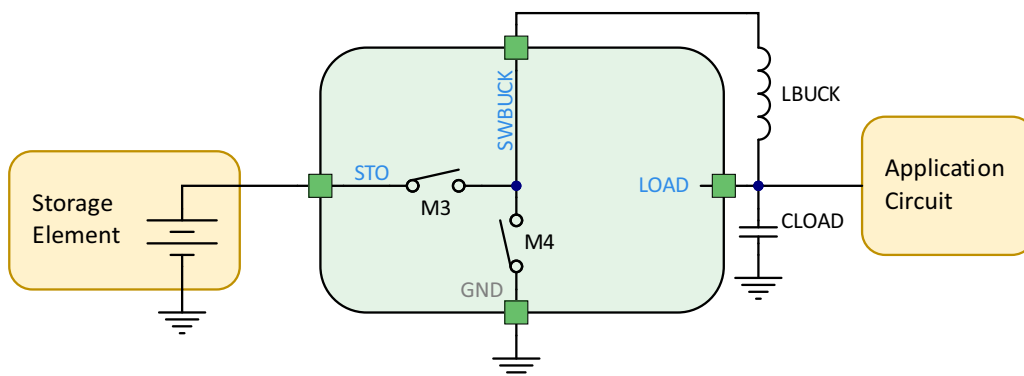


Figure 6: Simplified schematic view of the buck converter

The buck (step-down) converter transfers energy from the battery connected on **STO** to the regulated **LOAD** output. The switching transistors of the buck converter are M3 and M4. The reactive power component of this converter is the external inductor L_{BUCK} . **LOAD** is decoupled by the capacitor C_{LOAD} , which smooths the voltage against the current pulses induced by the buck converter and by the external circuit connected to **LOAD**.

Setting the **LOAD** regulation voltage V_{LOAD} is done through **LOAD_CFG[1:0]** pins.

After cold start, the buck converter starts once V_{STO} is higher than V_{CHRDY} . It stays enabled, and thus regulates V_{LOAD} , until V_{STO} drops below V_{OVDIS} longer than T_{CRIT} .

When the difference between V_{STO} and V_{LOAD} is smaller than 0.25V, it switches to “bang-bang” controlled converter mode:

- When V_{LOAD} is too low, a switch connects **STO** directly to **LOAD**, making V_{LOAD} rise.
- When V_{LOAD} is too high, the controller disconnects **STO** and **LOAD** so that V_{LOAD} decreases.

4.5. State Machine Description

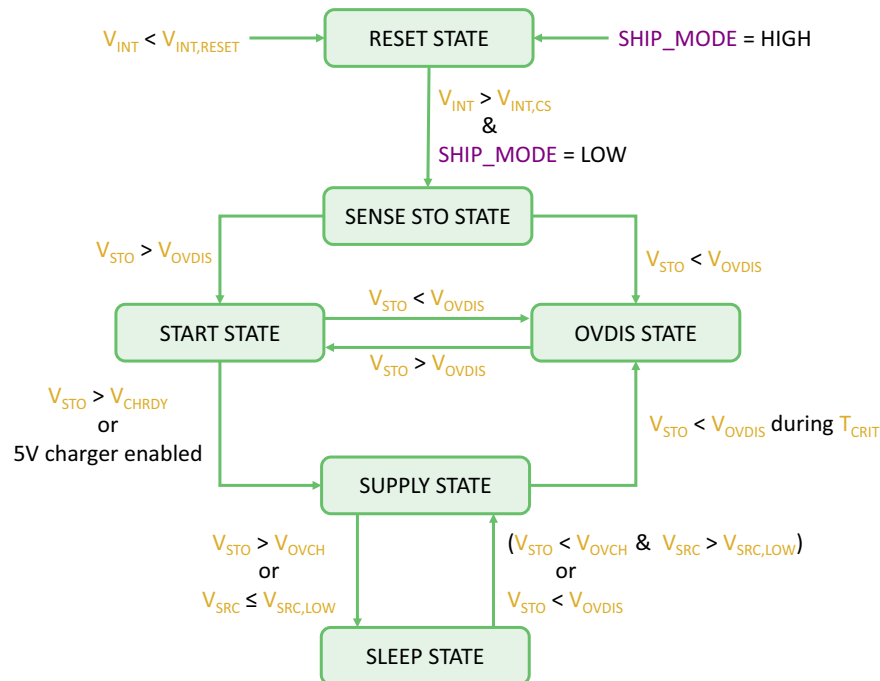


Figure 7: AEM10920 state machine

4.5.1. Reset State

The AEM10920 enters **RESET STATE** if one of the following is true:

- V_{INT} is below $V_{INT,RESET}$.
- shipping mode is enabled (**SHIP_MODE** is HIGH).

In **RESET STATE**, the AEM10920 behaves as follows:

- The AEM10920 is performing a cold start to make V_{INT} rise to 2.3 V. Cold start can be done from any of the following energy sources:
 - **SRC** ($V_{SRC} > 0.275$ V and $P_{SRC,CS} > 1.5$ μ W).
 - **5V_IN** ($V_{5V_IN} > 3.5$ V).
- The AEM10920 internal circuit, connected on **VINT**, is supplied by **SRC** or **5V_IN**. No current is drawn from the battery.
- **ST_STO** is LOW.

The AEM10920 stays in **RESET STATE** until the power available on **SRC** or on **5V_IN** meets the cold-start requirements long enough to make V_{INT} reach 2.3 V (see Table 6). Then:

- If shipping mode is disabled (**SHIP_MODE** is LOW), the AEM10920 reads the value on all configuration pins and switches to **SENSE STO STATE**.

- If shipping mode is enabled (**SHIP_MODE** is HIGH), the AEM10920 stays in **RESET STATE** until shipping mode is disabled by setting **SHIP_MODE** LOW. **SHIP_MODE** is read every $T_{GPIO,MON}$.

Please note that, from any state, the AEM10920 will switch to **RESET STATE** if V_{INT} drops below $V_{INT,RESET}$.

4.5.2. Sense STO State

In **SENSE STO STATE**, a first measure of V_{STO} is performed by the AEM10920.

- If $V_{STO} > V_{OVDIS}$, the AEM10920 switches to **START STATE**.
- If $V_{STO} < V_{OVDIS}$, the AEM10920 switches to **OVDIS STATE**.
- **ST_STO** is LOW.

In **SENSE STO STATE**, none of the DCDC converters are running.

4.5.3. Start State

When in **SENSE STO STATE**, the AEM10920 switches to **START STATE** if V_{STO} is above V_{OVDIS} .

In **START STATE**, the AEM10920 behaves as follows:

- The battery connected on **STO** is charged by the boost converter or by the 5 V charger, until V_{STO} reaches V_{CHRDY} .
- The AEM10920 internal circuit connected on **VINT** is supplied by the battery regardless of the power available on **SRC** or **5V_IN**.
- The buck converter (**LOAD**) is disabled.
- **ST_STO** is LOW.

4.5.4. Supply State

When in **START STATE**, the AEM10920 switches to **SUPPLY STATE** if one of the following conditions is true:

- V_{STO} is above V_{CHRDY} .
- The 5V charger is enabled, meaning that the following conditions are both true:
 - $V_{5V_IN} > V_{STO} + 200 \text{ mV}$
 - $V_{5V_IN} > 3.5 \text{ V}$

In **SUPPLY STATE**, the AEM10920 behaves the same as when in **START STATE**, but with the following differences:

- The buck converter driving **LOAD** is enabled (if enabled by the user).
- **ST_STO** is HIGH.

When in **SUPPLY STATE**, the AEM10920 switches to **SLEEP STATE** if one of the following conditions is met:

- $V_{STO} > V_{OVCH}$
- $V_{SRC} \leq V_{SRC,LOW}$

In **SUPPLY STATE**, the AEM10920 switches to **OVDIS STATE** if the following condition is met:

- $V_{STO} < V_{OVDIS}$ during T_{CRIT}

4.5.5. OVDIS State

The AEM10920 switches to **OVDIS STATE** if:

- V_{STO} is below V_{OVDIS} when in **SENSE STO STATE** or **START STATE**.
- V_{STO} remains below V_{OVDIS} for more than T_{CRIT} when in **SUPPLY STATE**.

In **OVDIS STATE**, the AEM10920 behaves as follows:

- The battery connected on **STO** is charged by the boost converter or by the 5 V charger, until V_{STO} exceeds V_{OVDIS} .
- The AEM10920 internal circuit, connected on **VINT**, is supplied by **SRC** or **5V_IN**. If not enough power is available on either of those pins, the AEM10920 switches to **RESET STATE**. No current is drawn from the battery.
- The buck converter (**LOAD**) is disabled.
- **ST_STO** is LOW.

4.5.6. Sleep State

SLEEP STATE allows for reducing the AEM10920 internal circuit consumption, and thus, keeping battery discharge to the minimum.

The AEM10920 switches from **SUPPLY STATE** to **SLEEP STATE** if one of the following conditions is true:

- the battery is fully charged ($V_{STO} > V_{OVCH}$).
- the source voltage is equal to or lower than $V_{SRC,LOW}$.

In **SLEEP STATE**, the AEM10920 behaves as follows:

- The battery connected on **STO** is not charged by **SRC**, allowing for reducing the quiescent current on **VINT** and thus, on **STO**.
- The AEM10920 internal circuit connected on **VINT** is supplied by the battery regardless of the power available on **SRC** or **5V_IN**.
- The buck converter (**LOAD**) is enabled.
- **ST_STO** is HIGH.

When in **SLEEP STATE**, the AEM10920 switches back to **SUPPLY STATE** if one of the following conditions is true:

- $V_{STO} < V_{OVCH}$ & $V_{SRC} > V_{SRC,LOW}$
- $V_{STO} < V_{OVDIS}$

5. System Configuration

5.1. Configuration Pins Reading

After a cold start, the AEM10920 reads the configuration pins. Those are then read periodically every $T_{GPIO,MON}$. The configuration pins can be changed on-the-fly. The floating configuration pins are read as HIGH, except `SHIP_MODE` which is read as LOW.

5.2. MPPT Configuration

Two parameters are necessary to configure the Maximum Power Point Tracking (MPPT). The first parameter is the MPP tracking ratio R_{MPPT} , which is selected according to the characteristics of the input power source. This parameter is set by the configuration pins `R_MPP[2:0]`.

The second parameter allows configuring the duration of the evaluation of V_{OC} and the time between two MPP evaluations. This configuration is set by the configuration pins `T_MPP[1:0]`.

Configuration			Function
<code>R_MPP[2:0]</code>			V_{MPP} / V_{OC}
L	L	L	35%
L	L	H	50%
L	H	L	65%
L	H	H	70%
H	L	L	75%
H	L	H	80%
H	H	L	85%
H	H	H	90%

Configuration		Function	
<code>T_MPP[1:0]</code>		$T_{MPPT,PERIOD}$ [s]	$T_{MPPT,SAMPLING}$ [s]
L	L	15	0.25
L	H	15	0.50
H	L	25	0.25
H	H	25	0.50

Table 10: Configuration of MPP ratio and timings

5.3. Storage Element Thresholds

5.3.1. Configuration Pins

The storage element protection thresholds V_{OVCH} , V_{CHRDY} and V_{OVDIS} , can be configured through the `STO_CFG[1:0]` pins as shown in Table 11.

Configuration pins		Overdischarge voltage [V]	Charge ready voltage [V]	Overcharge voltage [V]	Battery Type
STO_CFG[1:0]		V_{OVDIS}	V_{CHRDY}	V_{OVCH}	
L	L	2.50	2.55	3.80	Lithium-ion Super Capacitor (LiC)
L	H	3.00	3.20	4.12	Lithium-ion battery
H	L	3.00	3.20	4.35	LiPo battery
H	H	3.50	3.55	3.90	Li-ion battery (ultra long life)

Table 11: Storage element configuration with `STO_CFG[1:0]` pins

DISCLAIMER: storage element thresholds provided in the table above are indicative to support a wide range of storage element variants. They are provided as is to the best knowledge of e-peas's application laboratory. They should not replace the actual values provided in the storage element manufacturer's specifications and datasheet.

5.4. Boost Converter Timings

The **BOOST_CFG** pin allows for modifying the peak current of the boost inductor by multiplying the on/off timings of the boost converter, as shown in Table 12. The higher the timing multiplier, the higher the boost inductor peak current, and thus the higher the average source current pulled from **SRC** to **STO**.

The peak current in the inductor also depends on the value of the inductor. Table 12 shows the minimum inductor value to be implemented for each timing value. Lower value may lead to damaging the AEM10920.

Configuration pin	Function		
	Timing multiplication factor	Minimum L_{BOOST} [μ H]	L_{BOOST} [μ H] for best efficiency
BOOST_CFG			
L	x1	3.3	15
H	x3	9.9	47

Table 12: Boost converter timings configuration

5.5. LOAD Output Voltage

Table 13 shows how to configure the regulated voltage on **LOAD** output with the **LOAD_CFG[1:0]** pins.

Configuration pins		LOAD voltage [V]
LOAD_CFG[1:0]		V_{LOAD}
L	L	OFF
L	H	2.2
H	L	2.5
H	H	2.8

Table 13: Configuration of LOAD voltage with **LOAD_CFG[1:0]** pins

The buck voltage cannot be selected higher than V_{OVDIS} . In such situation, the AEM10920 will not start the buck converter.

5.6. 5 V Charger

The 5 V charger implements CC/CV operation. When in CC, the maximum charging current $I_{5V,CC}$ can be set by connecting a resistor R_{5V_IMAX} between **5V_IMAX** and **GND**:

$$I_{5V,CC} = \frac{50}{R_{5V_MAX}}$$

Please note that R_{5V_IMAX} must be chosen so that $I_{5V,CC}$ complies to the range defined in Table 6. Example values can be found in Table 14:

Resistor [Ω]	Maximum Charging Current [mA]
R_{5V_IMAX}	$I_{5V,CC}$
370	135.0
680	73.5
1500	33.3
3700	13.5

Table 14: Typical resistor values for setting 5 V charger max. current

Please note that the rise time of the voltage applied on **5V_IN** must not be too short. Thus, it is recommended to add a RC circuit in series with the **5V_IN** pin which matches the following, with R_{5V} in series and C_{5V} between **5V_IN** and **GND**:

$$R_{5V} \cdot C_{5V} > T_{5V,RISE}$$

- $T_{5V,RISE}$ is the rise time from 0 V to 5 V of the voltage on the **5V_IN** pin (see Table 2.4). Comparing this to the RC constant adds a margin as the RC constant defines 63% of the final voltage.
- R_{5V} must be determined so that, for the configured $I_{5V,CC}$, the voltage on the **5V_IN** pin is:
 - above 3.5 V.
 - above $V_{STO} + 200$ mV.
- C_{5V} is determined from the value of R_{5V} using the equation above. A low charging current allows for high R_{5V} value and thus for a low C_{5V} value.

6. Typical Application Circuit

6.1. Example Circuit 1

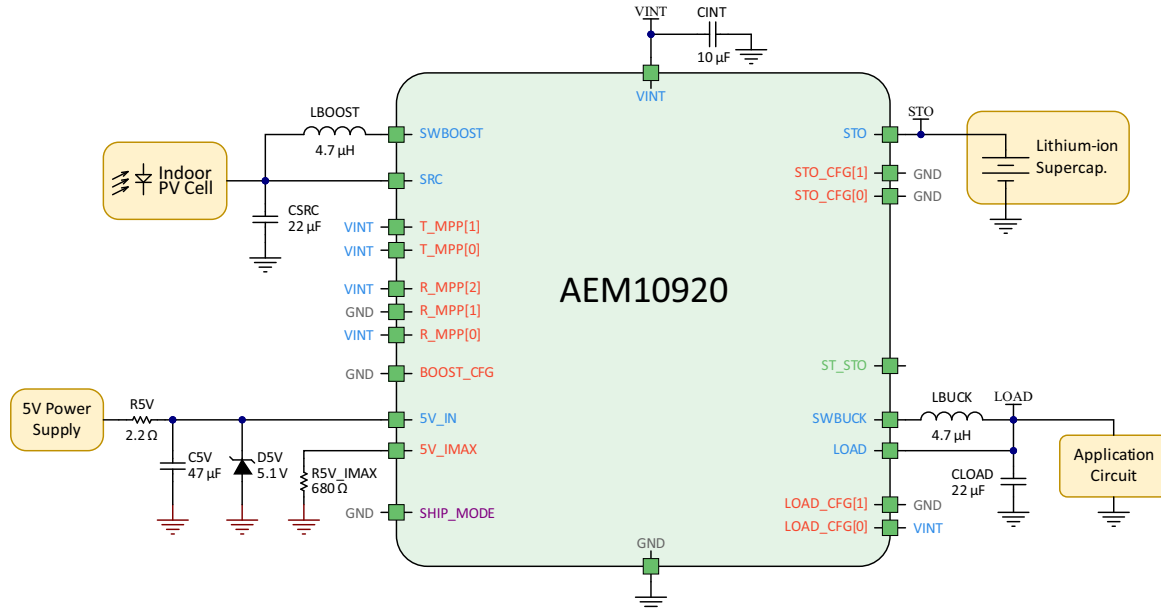


Figure 8: Typical application circuit 1

Figure 8 shows a typical application circuit of the AEM10920.

Configuration of SRC

The energy source is an indoor PV cell which has an 80% MPP ratio. SRC is thus configured as follows:

- $R_MPP[2:0]$ = HLH: 80% ratio.
- $T_MPP[1:0]$ = HH:
 - $T_{MPPT,PERIOD}$ = 25s.
 - $T_{MPPT,SAMPLING}$ = 0.5s.
- $BOOST_CFG$ = L: x1 boost timing.
- L_{BOOST} = 4.7 μ H for high current capability with x1 boost timing (see Section 5.4) and low-cost inductor.

Configuration of STO

The storage element is a Lithium-ion supercapacitor, so storage element threshold voltages are set as follows:

- $STO_CFG[1:0]$ = LL.
- V_{OVDIS} = 2.5 V.
- V_{CHRDY} = 2.55 V.
- V_{OVCH} = 3.8 V.

Configuration of LOAD

The application circuit is supplied with 2.2 V with current peaks up to 40 mA. The buck converter is configured as follows:

- $LOAD_CFG[1:0]$ = LH (2.2 V)
- L_{BUCK} = 4.7 μ H for high current capability and low cost inductor.

Shipping mode

Shipping mode is not used.

- $SHIP_MODE$ is connected to GND.

Configuration of 5V_IN

The maximum allowed current to charge the storage element is 75 mA. Closest standard series resistor is 680 Ω , which leads to a 73.5 mA maximum current.

- R_{5V_IMAX} = 680 Ω .
- $I_{5V,CC}$ = 73.5 mA.

The RC filter, which role is to slow down the rise time of the 5 V source, can be determined with the following steps.

R_{5V} is calculated so that its voltage drop across it ensures a voltage on $5V_IN$ higher than $V_{OVCH} + 200\text{ mV}$:

$$I_{5V,CC} \cdot R_{5V} < 5V - V_{OVCH} - 0.2V$$

$$R_{5V} < \frac{5V - V_{OVCH} - 0.2V}{I_{5V,CC}} \Leftrightarrow R_{5V} < \frac{5V - 3.8V - 0.2V}{73.5 \times 10^{-3}}$$

$$R_{5V} < 13.6\Omega$$

C_{5V} is calculated so that the $5V_IN$ voltage rise time remains below $T_{5V,RISE}$:

$$R_{5V} \cdot C_{5V} > T_{5V,RISE}$$

$$R_{5V} \cdot C_{5V} > 50\mu s$$

To meet these two conditions, the following component values have been selected:

- $R_{5V} = 2.2\ \Omega$
- $C_{5V} = 47\ \mu F$

The 5 V source is expected to have ripple and/or over voltages up to 5.5 V, so a 5.1 V zener diode D_{5V} is added to prevent those to damage the AEM10920.

The minimum power rating of D_{5V} is computed as follows, from its maximum reverse current I_{D5V} , its voltage V_{D5V} , and the resistor R_{5V} :

$$P_{D5V} \geq I_{D5V} \cdot V_{D5V} \Leftrightarrow P_{D5V} \geq \frac{5.5V - 5.1V}{R_{5V}} \cdot 5.1V$$

$$P_{D5V} \geq \frac{5.5V - 5.1V}{2.2} \cdot 5.1V \Leftrightarrow P_{D5V} \geq 927\text{ mW}$$

R_{5V} dissipated power $P_{R5V,idle}$ when the 5V charger does not pull any current to charge the storage element is determined as follows:

$$P_{R5V,idle} = \frac{(5.5V - 5.1V)^2}{R_{5V}} \Leftrightarrow P_{R_{5V},idle} = \frac{(5.5V - 5.1V)^2}{2.2}$$

$$P_{R_{5V},idle} = 73\text{ mW}$$

Furthermore, R_{5V} dissipated power $P_{R5V,CC}$ at $I_{5V,CC}$ current (73.5 mA) is determined as follows:

$$P_{R_{5V},CC} = R_{5V} \cdot I_{5V,CC}^2 = 2.2\Omega \cdot (73.5\text{ mA})^2 = 12\text{ mW}$$

The minimum required power rating of R_{5V} is the maximum of $P_{R5V,idle}$ and $P_{R5V,CC}$, thus, 73 mW.

6.2. Example Circuit 2

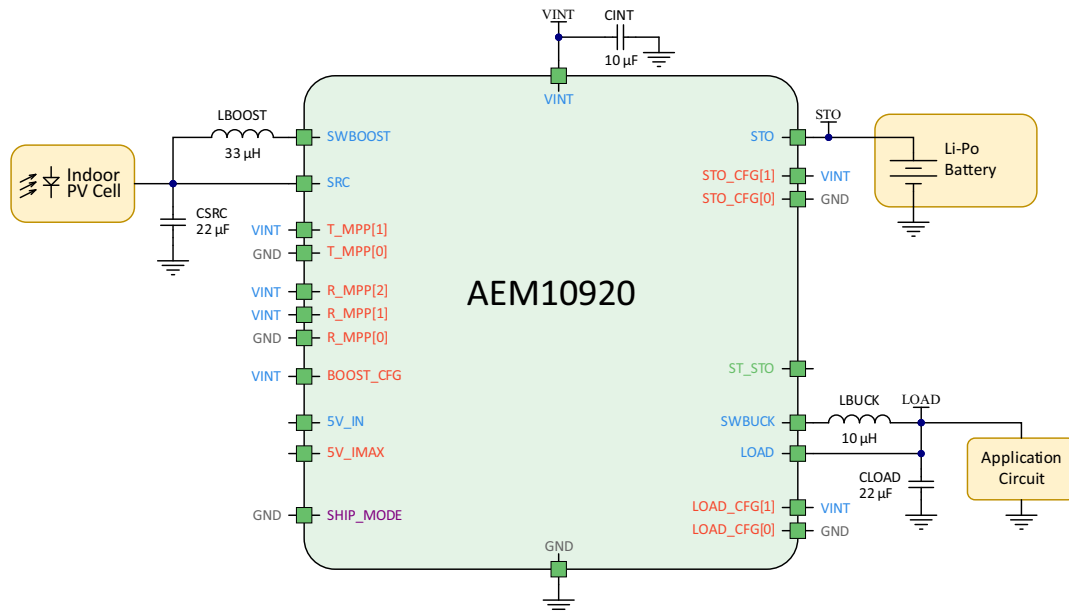


Figure 9: Typical application circuit 2

Figure 9 shows a typical application circuit of the AEM10920.

Configuration of SRC

The energy source is an indoor PV cell which has an 85% MPP ratio. SRC is thus configured as follows:

- $R_MPP[2:0]$ = HHL: 85% ratio.
- $T_MPP[1:0]$ = HL:
 - $T_{MPPT,PERIOD}$ = 25s.
 - $T_{MPPT,SAMPLING}$ = 0.25s.
- $BOOST_CFG$ = H: x3 boost timing.
- L_{BOOST} = 33 μ H for best tradeoff between efficiency and maximum current with x3 boost timing (see Table 8).

Configuration of STO

The storage element is a Lithium-Polymer (Li-Po) battery used with the matching $STO_CFG[1:0]$ preset:

- $STO_CFG[1:0]$ = HL

- V_{OVDIS} = 3.00 V

- V_{CHRDY} = 3.20 V

- V_{OVCH} = 4.35 V

Configuration of LOAD

The application circuit is supplied with 2.5 V with current peaks up to 10 mA. The buck converter is configured as follows:

- $LOAD_CFG[1:0]$ = HL (2.5 V)
- L_{BUCK} = 10 μ H for best tradeoff between efficiency and maximum current (see Table 8).

Configuration of 5V_IN

5 V charger is not used so both $5V_IN$ and $5V_IMAX$ are left floating.

Shipping mode

Shipping mode is not used.

- $SHIP_MODE$ is connected to GND.

7. Minimum BOM

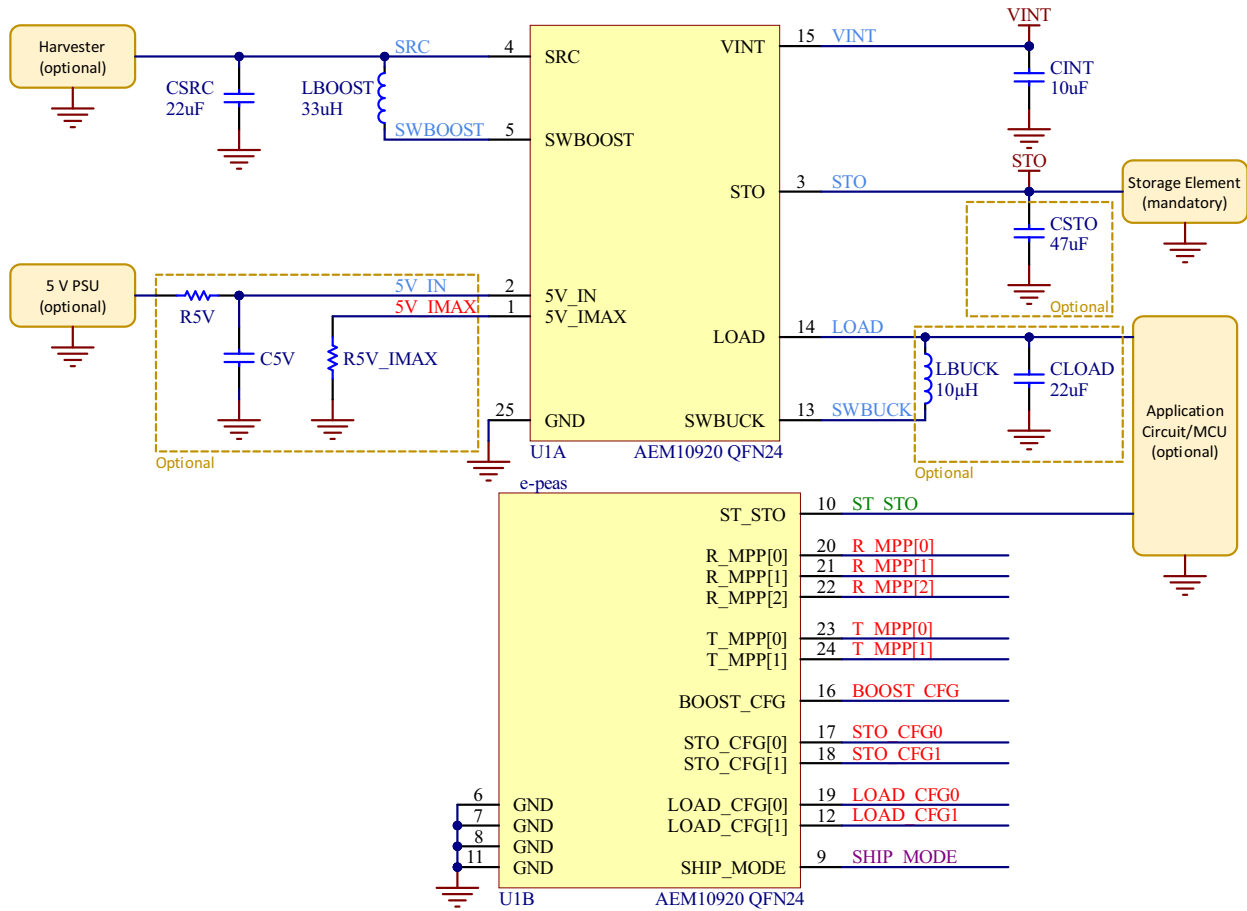


Figure 10: Schematic with minimum BOM

Designator	Description	Quantity	Manufacturer	Part Number
Mandatory	U1	1	e-peas	order at sales@e-peas.com
	CSRC ¹	1	Murata	GRM188R61A226ME15D
	LBOOST ¹	1	Coilcraft	LPS4018-333MRB
	CINT	1	Murata	GRM155R60J106ME44D
Optional	CSTO ²	1	Murata	GRM188R60J476ME15D
	R5V_IMAX ¹	1	To be defined	
	C5V ¹	1	To be defined	
	R5V ¹	1	To be defined	
	D5V ¹	1	To be defined	
	LBUCK	1	TDK	VLS252012CX-100M-1
	CLOAD	1	Murata	GRM188R61A226ME15D

Table 15: Minimum BOM

- The AEM10920 must have at least one energy source to work: boost (SRC), 5 V input (5V_IN) or both.
- CSTO is not mandatory but ensures high boost converter efficiency with high ESR storage elements.

9. Package Information

9.1. Moisture Sensitivity Level

Package	Moisture Sensitivity Level (MSL) ¹
QFN-24	Level 1

Table 16: Moisture sensitivity level

1. According to JEDEC 22-A113 standard.

9.2. RoHS Compliance

e-peas product complies with RoHS requirement.

e-peas defines “RoHS” to mean that semiconductor end-products are compliant with RoHS regulation for all 10 RoHS substances.

This applies to silicon, die attached adhesive, gold wire bonding, lead frames, mold compound, and lead finish (pure tin).

9.3. REACH Compliance

The component and elements used by e-peas subcontractors to manufacture e-peas PMICs and devices are REACH compliant. For more detailed information, please contact e-peas sales team.

9.4. Package Dimensions

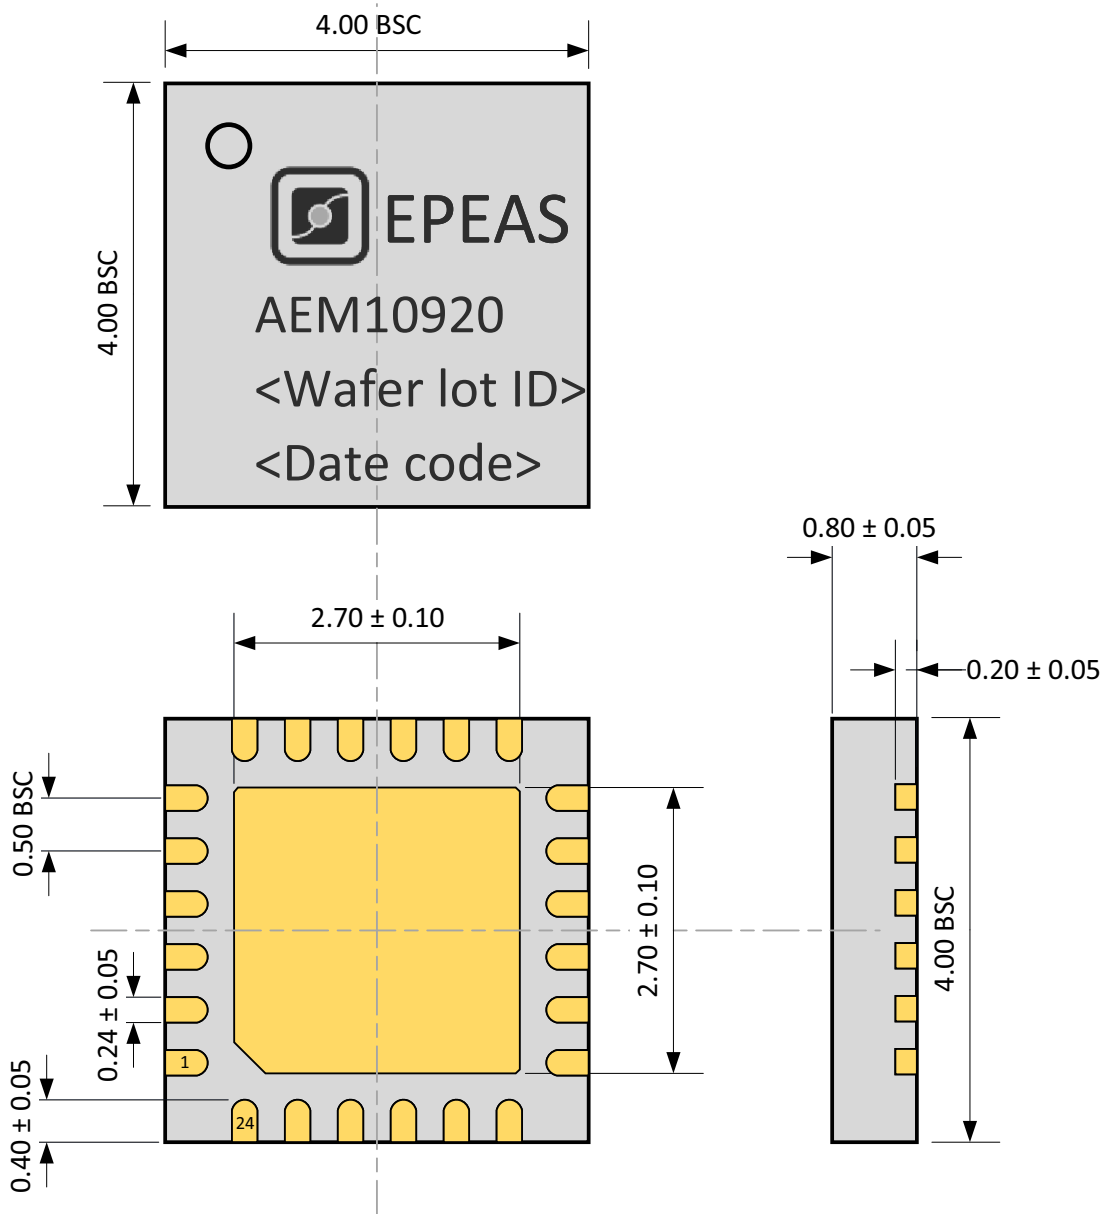


Figure 12: QFN 24-pin 4x4mm drawing (all dimensions in mm)

9.5. Board Layout

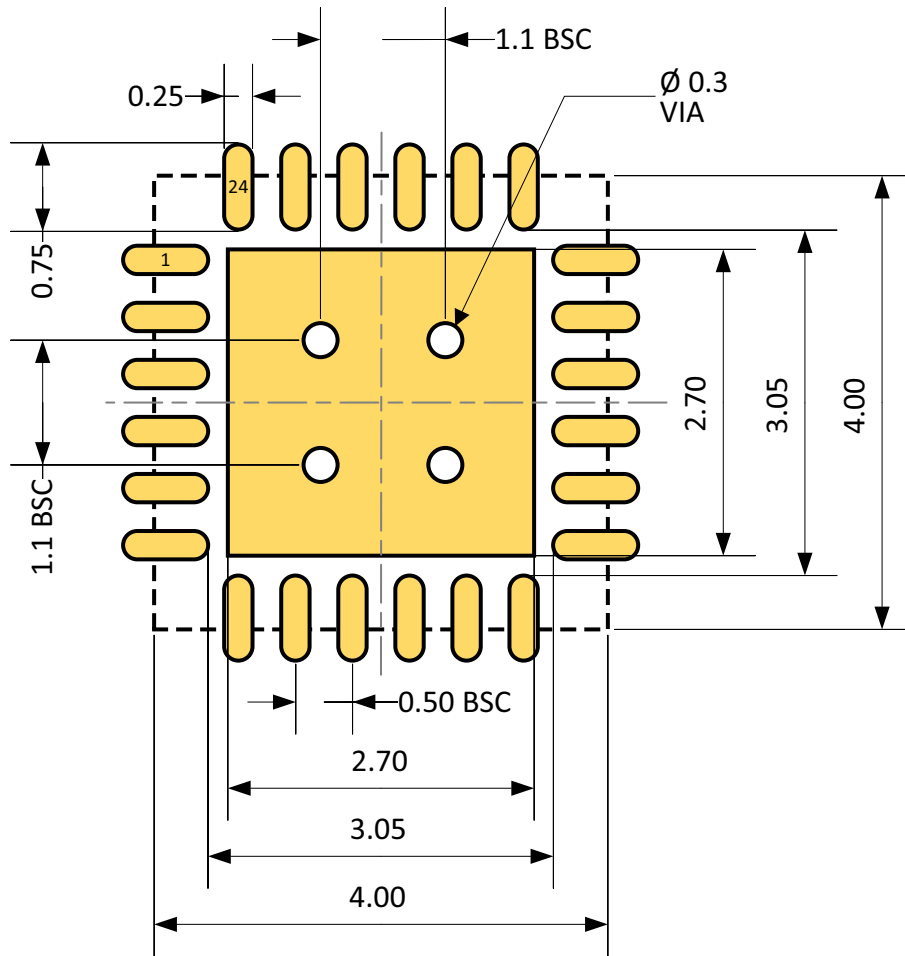


Figure 13: Recommended board layout for QFN24 package (all dimensions in mm)

10. Glossary

10.1. VINT Acronyms

C_{INT}

Decoupling capacitor on **VINT** pin.

V_{INT}

Voltage on the **VINT** pin.

$V_{INT,CS}$

Minimum voltage on **VINT** to allow the AEM10920 to switch from **RESET STATE** to **SENSE STO STATE**.

$V_{INT,RESET}$

Minimum voltage on **VINT** before switching to **RESET STATE** (from any other state).

I_{QSLEEP}

Quiescent current drawn on **STO** when the AEM10920 is in **SLEEP STATE**.

$I_{QSUPPLY}$

Quiescent current drawn on **STO** when the AEM10920 is in **SUPPLY STATE**.

I_{QSHIP}

Quiescent current drawn on the storage element when the AEM10920 is in shipping mode (**SHIP_MODE** is HIGH) and that no energy is available on **SRC** (the AEM10920 is off in that case).

$I_{QSHIP,SRC}$

Current drawn on the storage element when the AEM10920 is in shipping mode and energy is available on **SRC**.

10.2. SRC Acronyms

V_{SRC}

Voltage on the **SRC** pin.

V_{OC}

Open circuit voltage of the harvester connected on **SRC**.

V_{MPP}

Target regulation voltage on **SRC** when extracting power.

$T_{MPPT,PERIOD}$

Time between two MPP evaluations (see Table 10).

$T_{MPPT,SAMPLING}$

Open-circuit duration for the MPP evaluations (see Table 10).

R_{MPPT}

Ratio of V_{MPP} to V_{OC} .

$V_{SRC,CS}$

Minimum voltage required on **SRC** for the AEM10920 to coldstart.

$V_{SRC,LOW}$

V_{SRC} threshold below which the AEM10920 switches to **SLEEP STATE**.

$P_{SRC,CS}$

Minimum power required on **SRC** for the AEM10920 to coldstart.

L_{BOOST}

Boost converter inductor.

C_{SRC}

Boost converter input capacitor.

10.3. STO Acronyms

V_{STO}

Voltage on the **STO** pin.

V_{OVDIS}

Minimum voltage accepted on the storage element before stopping to supply **LOAD** (see Section 5.3).

V_{CHRDY}

Minimum voltage accepted on the storage element before starting to supply **LOAD** in **START STATE** (see Section 5.3).

V_{OVCH}

Maximum voltage accepted on the storage element before disabling its charging (see Section 5.3).

10.4. LOAD Acronyms

V_{LOAD}

Voltage on the **LOAD** pin.

C_{LOAD}

Decoupling capacitor on **LOAD** pin.

L_{BUCK}

Buck converter inductor.

10.5. 5V_IN Acronyms

V_{5V_IN}

Voltage on **5V_IN** pin.

$V_{5V_IN,MIN}$

Minimum voltage on **5V_IN** pin.

$I_{5V,CC}$

Current provided to the storage element by the **5V_IN** when in constant current mode.

$I_{5V,CV}$

Current provided to the storage element by the **5V_IN** when in constant voltage mode.

R_{5V_IMAX}

Resistor connected between **5V_IMAX** and GND that defines the maximum current provided to the storage element by the 5 V charger (**5V_IN** pin).

R_{5V} / C_{5V}

Respectively, resistor and capacitor creating a RC filter to slow down the rising time of the voltage on the **5V_IN** pin.

D_{5V}

Zener diode that ensures that the voltage on **5V_IN** stays below 5.5 V at any time.

$P_{R_{5V},idle}$

Power dissipated by R_{5V} when no current is pulled by the 5 V charger (current only flowing in the zener protection diode).

$P_{R_{5V},CC}$

Power dissipated by R_{5V} when the 5 V charger is in constant current (CC) mode.

10.6. Various Acronyms

$T_{GPIO,MON}$

GPIO reading rate.

T_{CRIT}

In **SUPPLY STATE**, the AEM10920 waits for T_{CRIT} before switching to **OVDIS STATE** when V_{STO} drops below V_{OVDIS} .

11. Revision History

Revision	Date	Description
1.0	December, 2023	Creation of the document.
1.1	January, 2024	<ul style="list-style-type: none"> - "Configuration of MPP ratio and timings" table: fixed wrong column title. - Added typical application circuit.
1.2	January, 2024	<ul style="list-style-type: none"> - Added Glossary. - "LOAD Output Voltage" section: "buck voltage cannot be selected smaller higher than V_{OVDIS}"
1.3	June, 2024	<ul style="list-style-type: none"> - L_{BUCK} in BOM in μH instead of μF. - Specified BOOST_CFG state when left floating in "Pin Configuration and Functions" section. - Added BOOST_CFG pin info to "Logic input pin connections" table. - Added cautionary statement about the AEM10920 storage element thresholds presets. - Added $I_{QSUPPLY}$ and I_{QSLEEP} values in "Electrical characteristics" table. - "State Machine Description" section: Added missing transition from START STATE to SUPPLY STATE when 5V charger is enabled.
1.4	June, 2024	<ul style="list-style-type: none"> - Added REACH and RoHS compliances. - Added info about 5 V charger voltage rise time limit and how to handle it. - Added cautionary statement along with storage element threshold voltages. - Corrected state machine transitions: <ul style="list-style-type: none"> - From START_STATE to SUPPLY_STATE. - From SUPPLY_STATE to SLEEP_STATE. - Pin description table: fixed pin 4 name. - Fixed cold start minimum power value.

Table 17: Revision history (part 1)

Revision	Date	Description
1.5	November, 2024	<ul style="list-style-type: none"> - Reworked of the first page. - Corrected the maximum input and output currents on the first page. - Modified MPPT voltage operation range minimum value to 120 mV on first page. - Added Absolute Maximum Ratings values. - Added ESD ratings table. - Added Moisture Sensitivity Level section. - Moved the RoHS and REACH compliances sections into the “Package Information” section. - Renamed “Typical Electrical Characteristics at 25°C” section to “Electrical Characteristics at 25°C”. - Modified the typ. minimum source power required for cold start to 1.5 μW. - Modified the evaluation board part number on first page. - Corrected pin 4 name to SRC in “Pins description” table. - Updated V_{MPP} maximum value to $0.90 \times V_{STO}$. - In “Recommended external components” table: <ul style="list-style-type: none"> - Added BOOST_CFG configuration condition for L_{BOOST} values and the corresponding min. and typ. values. - Modified L_{BUCK} typical value to 10 μH. - Modified L_{BOOST} minimum values. - Added minimum and typical values for C_{LOAD}. - In “Boost converter timings configuration” table: <ul style="list-style-type: none"> - Modified L_{BOOST} minimum values for each boost converter timing. - Added recommended L_{BOOST} values for best efficiency. - Added $V_{5V_IN} \geq V_{STO} + 200$ mV condition for the 5 V charger to operate in the different 5 V charger sections. - Added $V_{SRC,LOW}$ throughout the document. - Updated the state machine figure SLEEP STATE input and output conditions and the “Sleep State” section. - Modified “Example Circuit 1” section for $R5V = 2.2 \Omega$ and $C5V = 47 \mu$F. - Corrected STO_CFG[1] connection to VINT instead of GND on “Typical application circuit 2” figure. - Renamed “Performances” section to “Typical Characteristics” and moved it in “Specifications” section. - Updated “Minimum BOM” section to specify CSTO, LBUCK and CLOAD as optional. - Updated layout example figure by adding R5V, C5V, D5V and R5V_IMAX. - Updated package dimensions and added markings in “QFN 24-pin 4x4mm drawing” figure. - Added “Board Layout” section and figure.

Table 17: Revision history (part 2)